

MAINTENANCE

Scheduled Maintenance		Normal Usage		Severe Usage*
Engine Oil & Filter	Replace	7,500	Replace	3,000
Tire Rotation	Perform	7,500	Perform	7,500
Drive Belt (Alt, Water Pump, A/C)	Inspect	7,500	Inspect	Same As Normal
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Climate Control Air Filter	Replace	every 12 mos. or 10,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Brake Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Drive Shaft & Boots	Inspect	7,500	Inspect	More Frequently
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Steering Gear Box, Linkage & Boots/Lower Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Automatic Transaxle Fluid	Inspect Replace	15,000 105,000	Inspect Replace	Same As Normal 30,000
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Coolant	Replace	every 24 mos. or 30,000	Replace	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Manual Transaxle Fluid	Inspect	30,000	Replace	60,000
Power Steering Pump, Belt & Hoses	Inspect	30,000	Inspect	Same As Normal
Rear Brake Drums/Linings, Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Timing belt	Inspect Replace	30,000 60,000	Inspect Replace	Same As Normal 40,000
Fuel Filter	Replace	37,500	Replace	Same As Normal
Crankcase Ventilation Hose	Inspect	52,500	Inspect	Same As Normal
Spark Plugs (Platinum Coated)	Replace	60,000	Replace	More Frequently
Valve Clearance (2.0L)	Inspect	60,000	Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	97,500	Replace	More Frequently

*For Additional Maintenance Schedule Information See Your Owner's Manual.

Looking For More Detailed Information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

HYUNDAI TIBURON QUICK REFERENCE GUIDE



NP150 - E8000
10/07 (rev 10/07)



www.hyundaiusa.com

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM Radio: 1-800-967-2346

DRIVER CONTROLS


Central Door Locks
Page 4

Tire Pressure Monitoring System
(TPMS)
Page 5

Windshield Wiper / Washer
Page 5

Front Fog Light Switch*
Page 6

Audio System
Page 7

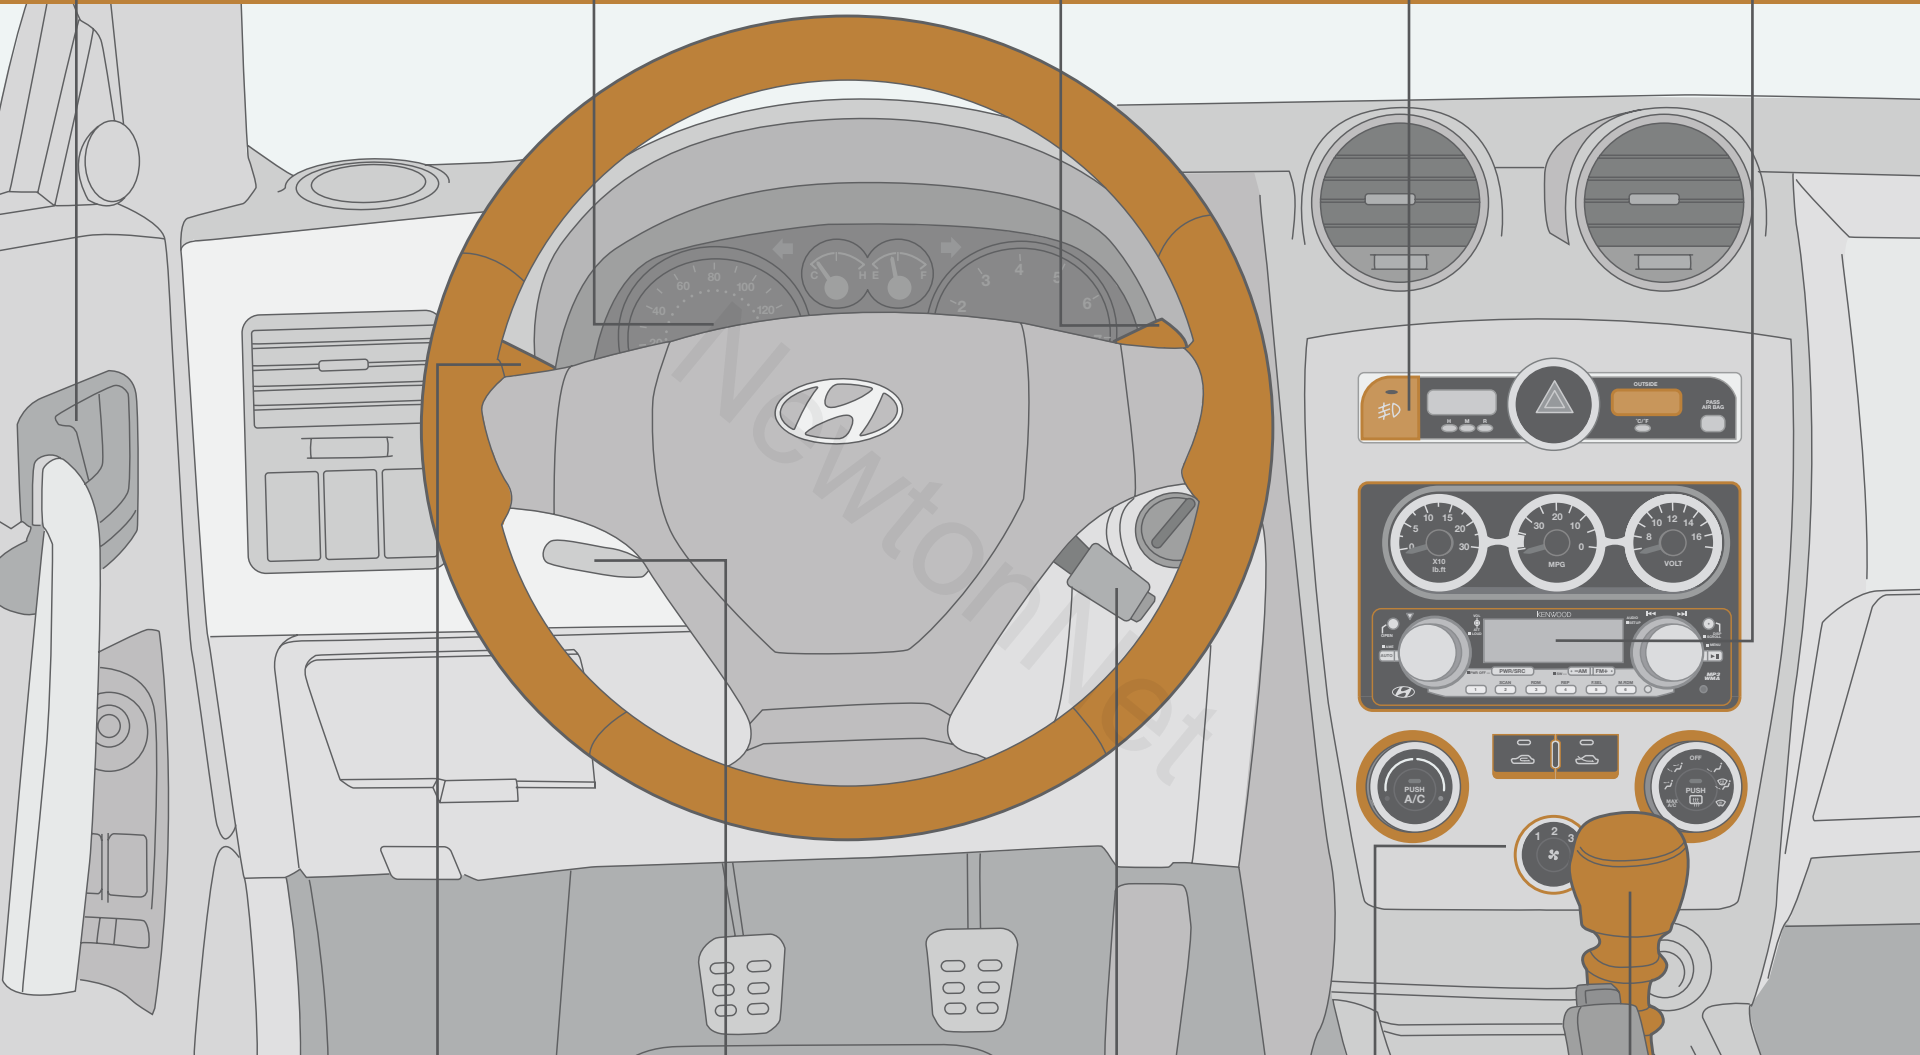

Headlights
Page 4

Tilt Steering Wheel
Page 4

Cruise Control
Page 6

Climate Control
Pages 8-9

Transmission
Page 10

DRIVER CONTROLS


CENTRAL DOOR LOCKS

The switch is located on the driver's door.

To lock all doors: Push the switch toward the front.

To unlock all doors: Push the switch toward the rear. The red mark on the switch will be visible.

NOTE: If the passenger door is open when the switch is pushed, the door will remain locked when closed.

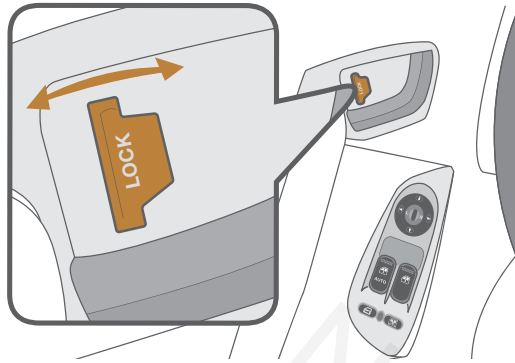

HEADLIGHTS

To operate the headlights, twist the switch on the end of the lever:

OFF – Headlights off


– Parking lights on

– Headlights on

NOTE: The ignition must be in the ON position to turn on the headlights.

High Beam Activation: Push the lever forward.

Flash Feature: Pull the lever toward you and release.

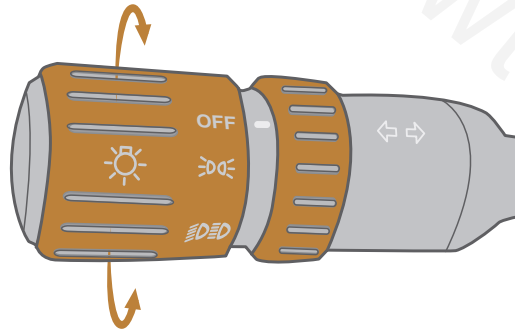


TILT STEERING WHEEL

TO ADJUST THE STEERING WHEEL:

1. Pull the lever toward you and hold it to unlock.
2. Raise or lower the steering wheel to the desired position.
3. After adjustment, release the lever.

NOTE: Do not attempt to adjust the steering wheel while driving.

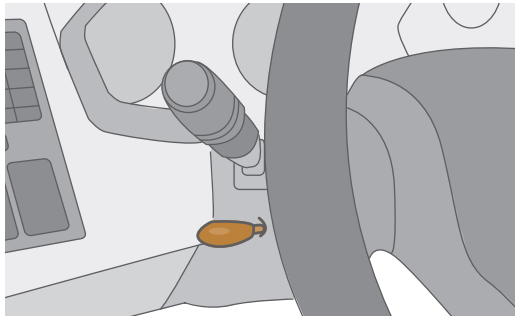

TIRE PRESSURE MONITORING SYSTEM (TPMS)

LOW TIRE PRESSURE INDICATOR:

Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to the proper pressure.

TPMS MALFUNCTION INDICATOR:

Illuminates and stays illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

NOTE: The TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure indicator.



WINDSHIELD WIPER / WASHER

To activate the windshield wipers, move the wiper / washer switch to one of the four positions:

MIST – This feature allows the windshield wipers to make a single wipe to clear any mist on the windshield. Move the windshield wiper / washer switch upward.



INT – Intermittent wiper operation is the first downward position. The wiper speed may be varied by rotating the INT switch.

LO – Low-speed operation is the second downward position.

HI – High-speed operation is the third downward position.

WIPE / WASH OPERATION

To use the windshield washer, pull the wiper / washer lever towards you. When the washer is operated, the wipers automatically make two passes across the windshield. The washer continues to operate until the lever is released.

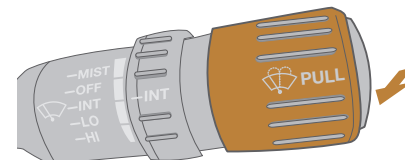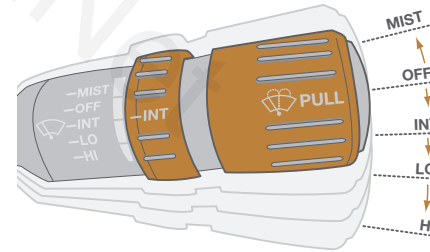

CRUISE CONTROL

To set a cruising speed:

1. **ON** **C** – Press the button and the CRUISE indicator in the instrument cluster will illuminate. Accelerate to the desired cruising speed (above 25 mph).

2. **SET** **D** – Toggle the switch downward and remove your foot from the accelerator pedal.


To accelerate or decelerate speed:

ACC **B** – Toggle the switch upward to accelerate your speed with cruising speed set.

COAST **D** – Toggle the switch downward to slow set speed down with cruising speed set.

To cancel the cruising speed:


Pull the **CANCEL** **A** switch towards you, press the brake pedal, depress the clutch pedal, or turn **OFF** **C** cruise control.

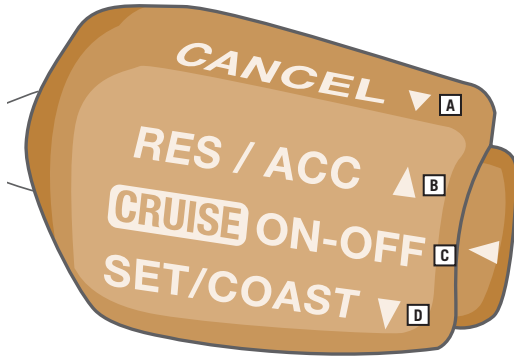


FRONT FOG LIGHT SWITCH (if equipped)

To turn on the front fog lights, push the switch.

NOTE: Fog lights will only function on low beam.

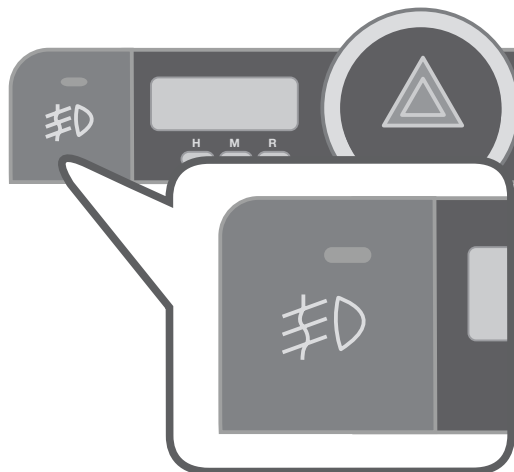

AUDIO SYSTEM

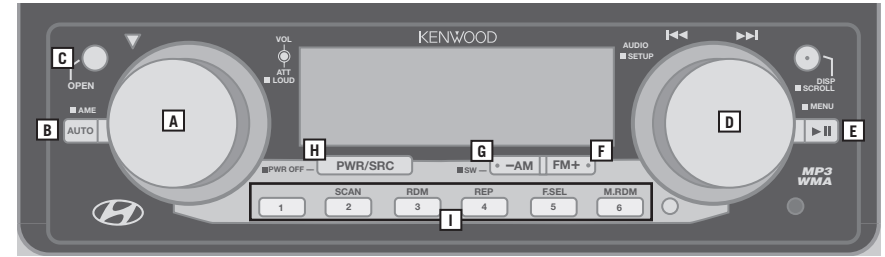

SETTING PRESET MEMORY BUTTONS (AM/FM OR XM®)

1. Turn radio on by pressing the PWR / SRC button **H**.

2. Select the source by pressing the PWR / SRC button **H**.

NOTE: Source – Press the PWR / SRC button to display the following source: Standby → Satellite (XM) → Tuner (AM/FM) → CD → Standby

3. Press the Auto button **B** until manual is displayed.

4. Turn the knob **D** to the desired channel.

5. Press and hold any preset button **I** (1-6) until an audible beep is heard to memorize the current channel.

NOTE: FM has 3 bands for up to 18 presets. XM has 4 bands for up to 24 presets.

AM/FM RADIO CONTROLS

1. Press the Auto button **B** to change tune mode:

Mode: SEEK → PRESET → MANUAL
Display: AUTO1 AUTO2 MANUAL

2. Turn the Channel Select knob **D** to the right or left to change to the next station.

3. Press the AM button **G** or FM button **F** to change frequency band.

TUNING AND LISTENING TO XM CHANNELS

1. Press the Auto button **B** to change tune mode:
Auto > Channel

2. Turn the Channel Select knob **D** to the right or left to change to the next station.

3. Press the FM+ button **F** to cycle through 4 bands of XM presets.

CD/MP3 CONTROLS

1. Press the OPEN button **C** to flip the faceplate down.

- Press the **▲** (located behind the faceplate) button to eject the CD.
- To load and play a CD, insert the CD (label side up) and close the faceplate.

2. Turn the Channel Select knob **D** to the right or left to change to the next or previous song.

3. Press the **▶||** button **E** to suspend or resume playback.

4. Press the FM button **F** to skip to the next folder or press the AM button **G** to skip to the previous folder.

ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

1. Press the Channel Select knob **D** to select the following sound qualities: Bass → Middle → Treble → Balance → Fader → SW Level

2. Turn the Channel Select knob **D** to adjust the sound quality.


NOTES:

- A clear view of the southern sky is recommended to ensure good XM radio reception.

Trial XM subscription ends 3 months following the vehicle date of sale. Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

AUTOMATIC CLIMATE CONTROL

(if equipped)

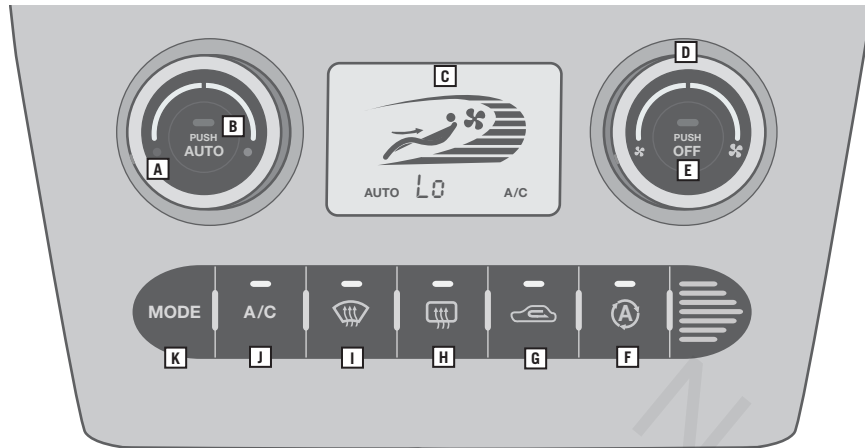

A TEMPERATURE CONTROL DIAL – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

B AUTO TEMPERATURE BUTTON – Push to activate the system for automatic heating and cooling.

C DISPLAY WINDOW – Displays the temperature control, the fan speed setting and the selected air flow.

D FAN SPEED CONTROL DIAL – Use to select the blower fan speed. Turn to the left for lower speed, turn to the right for higher speed.

E OFF – Press to turn the fan off.

F FRESH AIR CONTROL BUTTON – With AQS (Air Quality System) push to activate / deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

G AIR RECIRCULATION BUTTON – Push to activate / deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.

H REAR WINDOW DEFROST BUTTON – Press to remove moisture from the rear window.

I FRONT WINDSHIELD DEFROST BUTTON – Press to clear the windshield of fog and / or thin ice.

J A/C – Press to turn the air conditioning on or off.


K MODE BUTTON – This controls the flow of air. Air flow can be directed to different levels.

DEFROSTING / DEFOGGING

1. Press Front Windshield Defrost Button **I**.
2. Set the temperature control **A** to the desired setting.
3. Set the fan speed control **D** to the maximum speed.

MANUAL CLIMATE CONTROL

(if equipped)

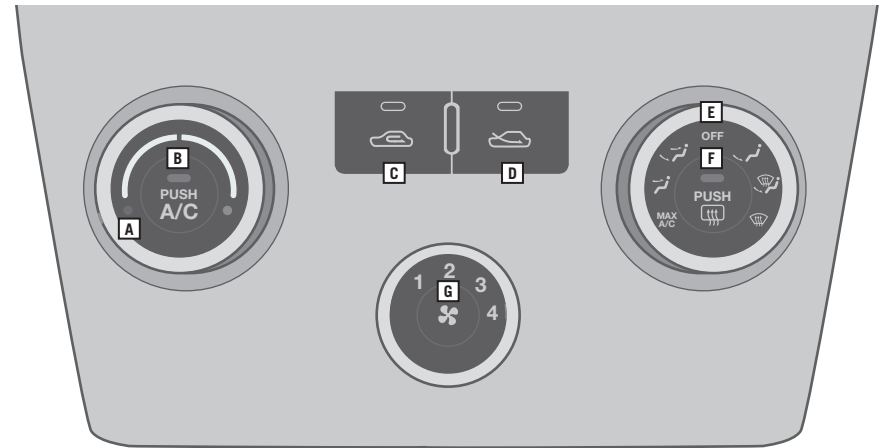

A TEMPERATURE CONTROL DIAL – Use to select the degree of heating. Turn to the left for cooler temperatures, turn to the right for warmer temperatures.

B A/C – Push to turn the air conditioning on or off.

C AIR RECIRCULATION BUTTON – Push to activate / deactivate. In this mode air from within the passenger compartment is drawn through the heating system and is heated or cooled according to the other functions selected.


D FRESH AIR CONTROL BUTTON – Push to activate / deactivate. In this mode air enters the vehicle from outside and is heated or cooled according to the other functions selected.

E AIR FLOW CONTROL BUTTON – Use to direct the flow of air.

F REAR WINDOW DEFROST BUTTON – Push to remove moisture from the rear window.

G FAN SPEED CONTROL DIAL – Use to select the blower fan speed. Turn to the left for lower speed, turn to the right for higher speed.

DEFROSTING / DEFOGGING

1. Set the air flow control **E** to the defrost  position.
2. Set the temperature control **A** to the desired setting.
3. Set the fan speed control **G** to position 3 or 4.

TRANSMISSION

AUTOMATIC TRANSMISSION

(if equipped)

To select automatic mode, shift to D.

P – Park

R – Reverse

N – Neutral


D – Drive

(+/-) – Shiftronic

- Push this lever forward to shift up one gear.

- Pull the lever backwards once to shift down one gear.

Automatic Transmission (Optional)

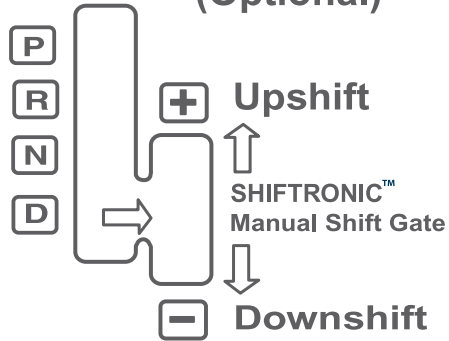


6-SPEED MANUAL TRANSMISSION

(if equipped)

ENGAGING REVERSE

When shifting into Reverse (R) gear, lift the collar tab up and then shift into the Reverse (R) gear position.

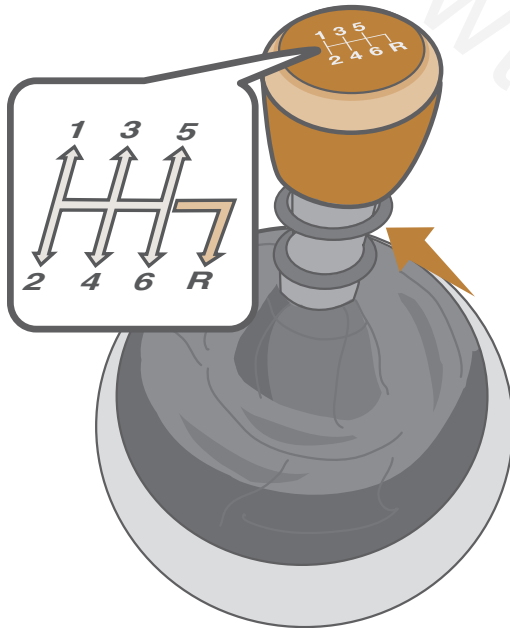

ADDITIONAL FEATURES

REMOTE KEYLESS ENTRY

LOCK



Press to lock all doors and arm the alarm. Press again to hear a confirmation chirp.

UNLOCK

Press to disarm the alarm and unlock the driver's door. Press again within four seconds to unlock all the doors.

PANIC

Press and hold to activate the horn and flashing lights for 30 seconds. Press again to turn off panic mode.

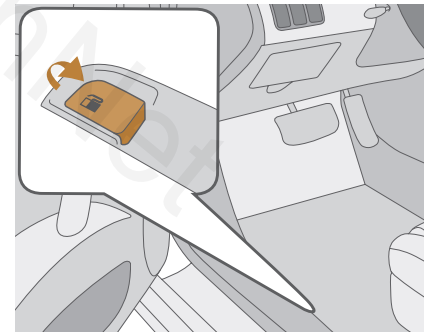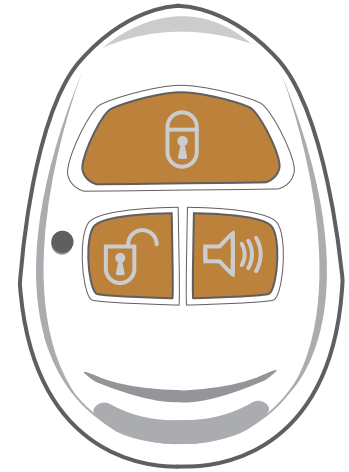


FUEL FILLER DOOR RELEASE

REFUELING


1. Pull fuel release lever.
2. Remove fuel cap.
3. Pump fuel.
4. Replace fuel cap.
5. Close fuel door.

NOTE: After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least three times. Failure to do this may result in the Check Engine light illuminating.

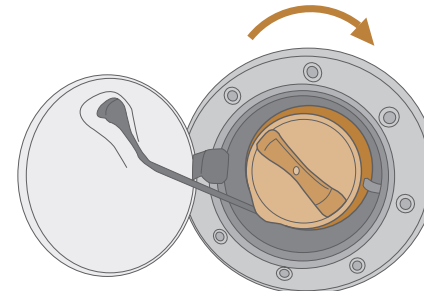

CUP HOLDERS

The drink holder is used for holding cups or cans. To use the passenger's drink holder, push the drink into the holder.

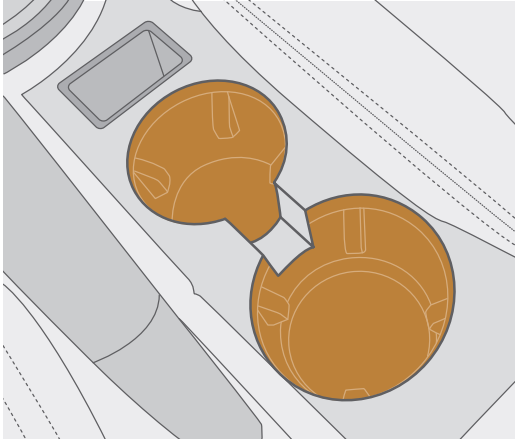


BASIC SAFETY PRECAUTIONS

Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts. Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details). Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment. Always refer to the Owner's Manual for complete safety precaution information.

NOTE: If the driver's seat belt is not fastened when the ignition key is turned to the ON or START position, the seat belt reminder light will blink and the warning chime will sound for approximately six seconds to remind the driver to fasten the driver's seat belt.

HEIGHT ADJUSTABLE FRONT SEAT SHOULDER BELT


To adjust, press the button and raise or lower the height adjuster to an appropriate position.

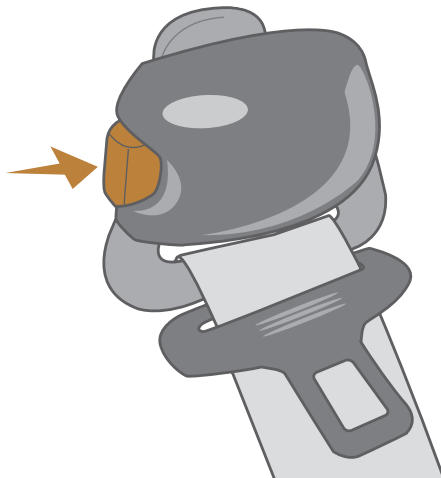

SEATS

Lumbar Support (if equipped):


To adjust the lumbar support, move the lever on the outboard or left side of the seat to the desired position.

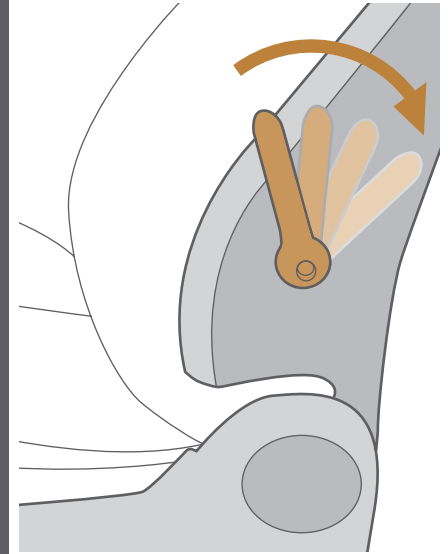

Seat Cushion Height Adjustment

(Driver's Seat Only):

To raise or lower the front part of the seat cushion, turn the knob forward or rearward.

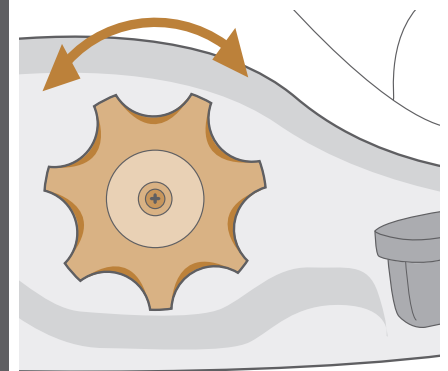


REAR SEAT ENTRY (Walk in device)

The driver and front passenger's seatbacks should be tilted to enter the rear seat.

Driver Side:

1. Pull up the walk in device lever **A** at the left-upper side of the driver side seatback, the seatback will tilt forward.
2. Pull the lock release lever **B** up to move the seat forward.

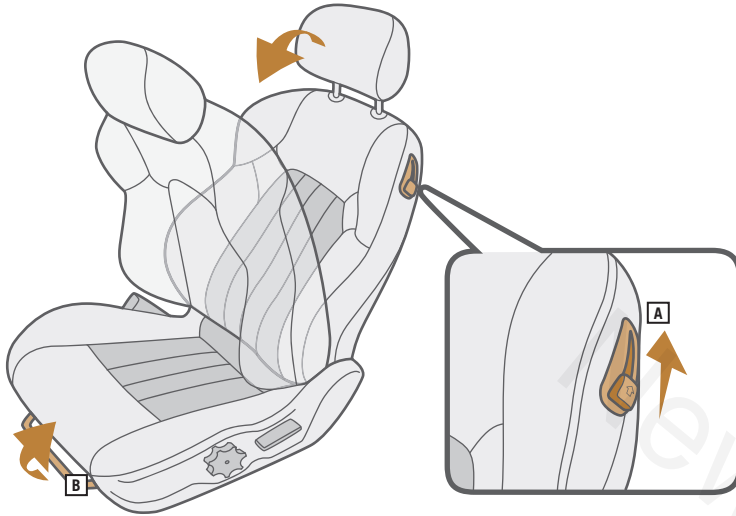


Passenger Side:

1. Pull up the walk in device lever **A** at the right-upper side of the passenger side seatback, the seatback will tilt forward.
2. Push the seat forward.

RECLINER MEMORY

By pulling up the walk in device lever **A** the seatback is reclined and returned to the original position.

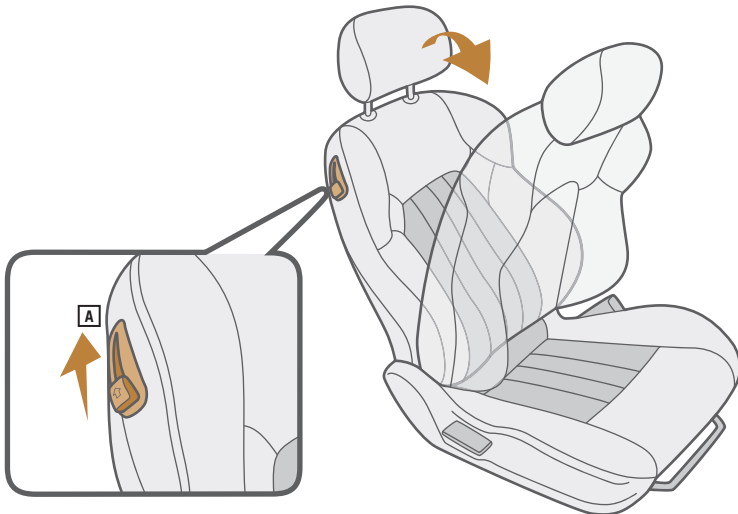


REAR SEAT


The rear seatbacks may be folded down to increase the luggage capacity or to ease in carrying long items.

To fold down the rear seat:

1. Pass the shoulder belt through the hanger, this will keep it out of the way and prevent it from getting damaged.

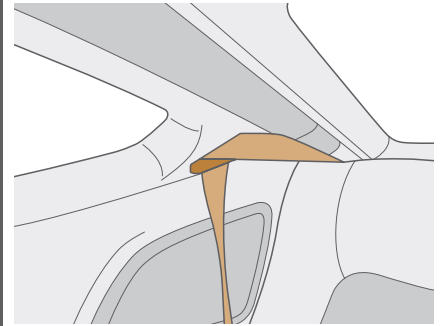


2. Insert the buckle in the pocket, this will prevent the buckle from being damaged by the seatback.

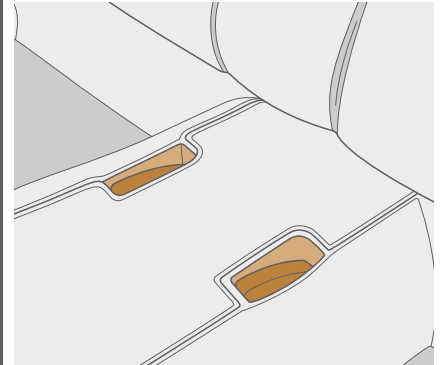

3. Unlock the seatback by pushing the seatback locking button, then pull forward on the seatback panel.

NOTE: When returning the seatback to its upright position make sure that it is locked into position by pulling and pushing on the top of the seatback.

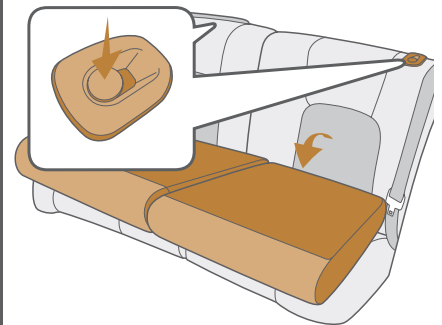

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- VERIFY ALL REMOTE KEYLESS ENTRY LOCK / UNLOCK
- VERIFY VEHICLE IS CLEAN INSIDE AND OUT
- CHECK PAINT FINISH FOR SCRATCHES, DENTS, ETC. (IF PRESENT NOTIFY MANAGER)
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE (IF EQUIPPED)


WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- CRUISE CONTROL – PAGE 6





- On / Off
- Set / Coast
- Resume / Accelerate

- KEYLESS ENTRY – PAGE 11

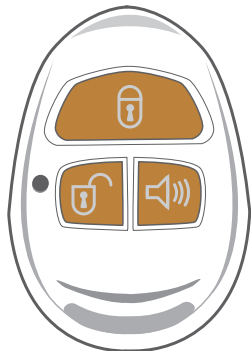

- Demonstrate dual stage unlock with key and with Remote Keyless Entry.
- Demonstrate unlocking the trunk with the key.

- SEAT ADJUSTMENT – PAGE 13

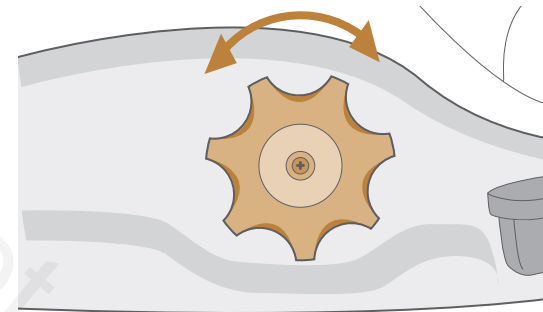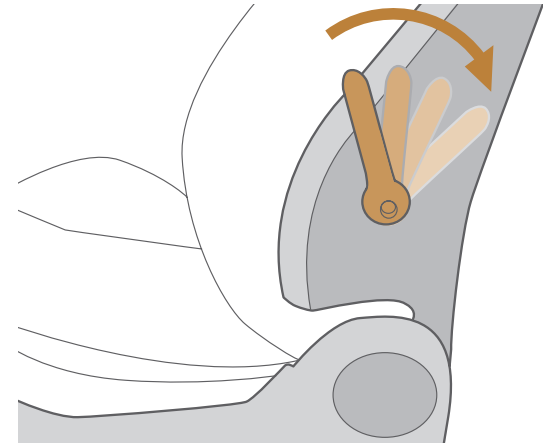

DURING DELIVERY

- VERIFY AUDIO AND VIDEO SYSTEMS OPERATION (CONFIRM PRESETS)
- VERIFY CLOCK TIME SETTING AND SET AS NEEDED
- EXPLAIN FIRST SERVICE PROCEDURE - PROVIDE SERVICE MANAGER'S OR SERVICE WRITER'S BUSINESS CARD
- REVIEW AMERICA'S BEST WARRANTY
- ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant

Date

Sales Manager

Date

Customer

Date