



OPTIONS

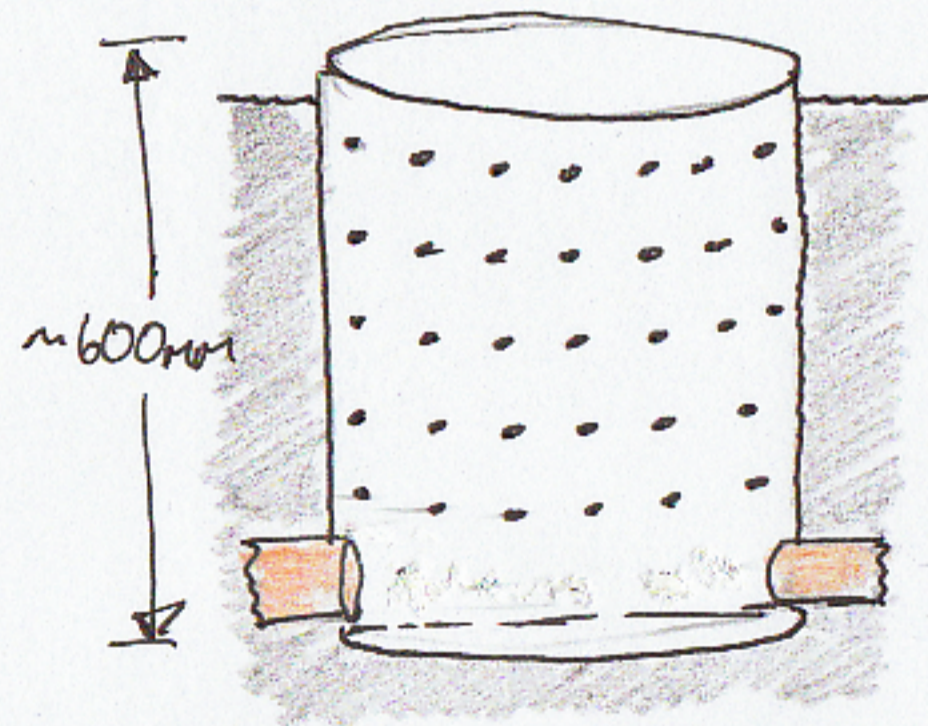

- A
- DRILL HOLES TO PERFORATE CHAMBER WALLS (FULL HEIGHT)

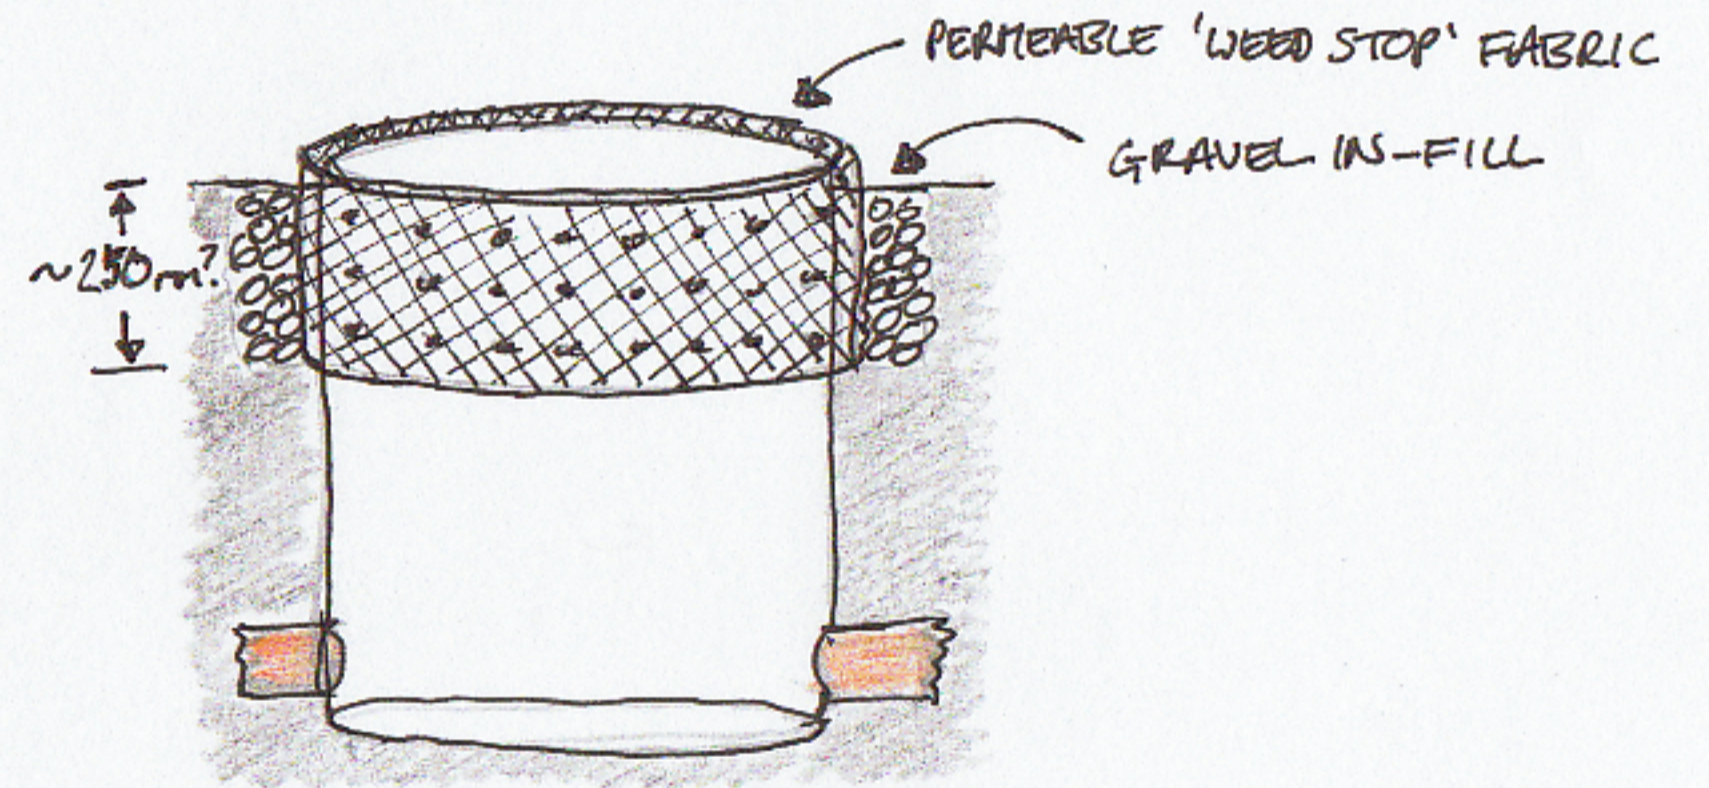

- B
- ONLY PERFORATE TOP PORTION OF CHAMBER
  - WRAP WITH WEED-STOP FABRIC TO PREVENT SILTING
  - IN-FILL WITH GRAVEL TO ALLOW FREE-FLOW OF WATER